

4100ESi 14A PSE Module Bay Mtg Bracket Installation Instructions

This sheet describes installation of the FP1142/ME0576 4100ESi 14A PSE Module Bay Mounting Bracket in a 4100ESi PDI expansion bay.



DO NOT INSTALL ANY SIMPLEX® PRODUCT THAT APPEARS DAMAGED. Upon unpacking your Simplex product, inspect the contents of the carton for shipping damage. If damage is apparent, immediately file a claim with the carrier and notify an authorized Simplex product supplier.

ELECTRICAL HAZARD - Disconnect electrical field power when making any internal adjustments or repairs. All repairs should be performed by a representative or authorized agent of your local Simplex product supplier.

Kit Contents

This kit contains:

1 x FA3043, 14A PSE Module Bay Mounting Bracket 4 x 6-32 UNC x 5/16" screws (Expansion Bay mounting)

1 x LT0690, these instructions.

Bracket Usage

The 14A PSE Module Bay Mounting Bracket can be used to mount a 14A PSE Module at seven locations in a PDI expansion bay, as the bracket occupies 2 slots of the 8 available in the bay. Before mounting in a bay ensure the mains lead can reach the GPO in the adjacent bay. The bracket does not fit into a 15U 4100ESi cabinet.

Order Of Assembly

Fit the 14A PSE Module onto the bracket, as per Figure 1, before mounting the bracket in a bay. Pass the PSE Module flying leads through the semi-round cut-out in the bracket before mounting the PSE on the bracket. With the flying leads in place, slot the PSE Module bottom mounting tab into the bracket bottom cut-out, then angle the PSE Module down onto the bracket and secure with two M4 x 10 screws.

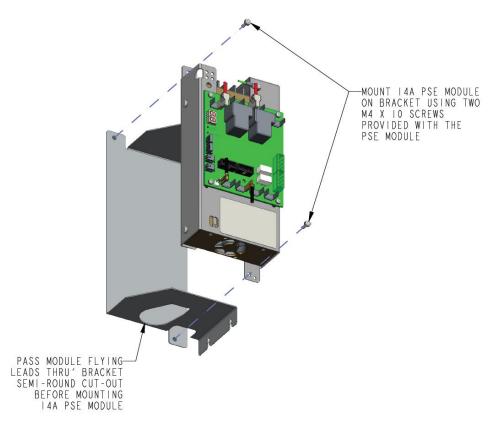


Figure 1 – 14A PSE Module mounting on bracket



4100ESi 14A PSE Module Bay Mtg Bracket Installation Instructions

Bracket Mounting Options Figure 2 shows a typical bracket mounting location in an expansion bay.

Mount the bracket, with 14A PSE fitted, as per Figure 2, using four 6/32 UNC screws provided.

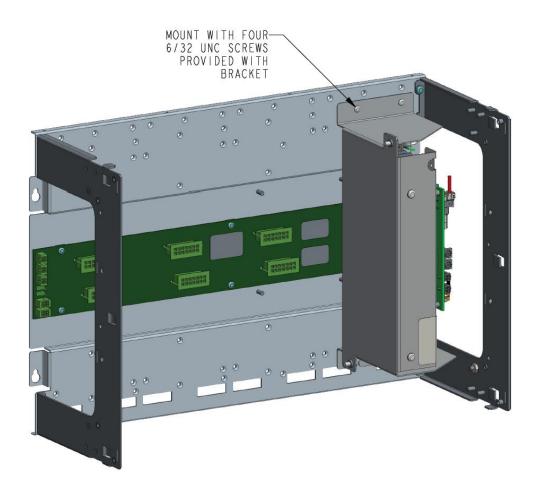


Figure 2 – Expansion Bay Mounting

Panel Connection

Refer to the 14A PSE Module Installation Instructions LT0685 for connection details.

© 2018. Johnson Controls. All rights reserved. All specifications and other information shown were current as of document revision date and are subject to change without notice.

LT0690 Page 2 of 2 Rev 1.00